

ABT3640

Bread Toaster

EASY START GUIDE


PACKAGE CONTENTS



Bread Toaster



Easy Start Guide

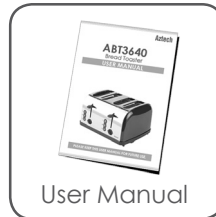

User Manual



Warranty Policy

USING THE BREAD TOASTER

TIPS BEFORE USING YOUR BREAD TOASTER

- It is **STRONGLY ADVISED** to ensure that you have read all provided safety guides and operating instructions in the **USER MANUAL BEFORE PROCEEDING**.
- Before use, please check if the power voltage of your Bread Toaster correctly corresponds to your home's power supply.
- Should damages be found on the appliance, its power cord and/or its other components – do not use the appliance and immediately bring it to the Aztech Service Center for repair or replacement.
- Do not, in any kind of manner, disassemble, dismantle, and/or perform appliance repair on your own and/or replace its components using non-Aztech approved components.
- For first time use, use the Bread Toaster without any bread. This will pre-heat the Bread Toaster and will immediately burn off any dust accumulated during storage.
- The Bread Toaster is designed with a short power cord to reduce and/or avoid hazards resulting from entanglement and/or tripping commonly encountered in long cords. If you will be using an extension cord, please ensure that the extension cord also corresponds to your Bread Toaster's power supply and that the extension is kept in an organized manner to avoid accidents.
- Ensure that the Crumb Tray is in place. Never operate the Bread Toaster without the Crumb Tray.

STEP 1: Plug it in

Plug in your Bread Toaster to a power outlet.

STEP 2: Insert Bread Slices

Simply insert a slice of bread in each bread slot.

STEP 3: Select a Toasting Level

Simply turn the Bread Shade Knob clockwise to your desired toast level (with 1 being the lightest and 6 as the darkest toast). If you are unsure of what bread shade to use, we recommend you to toast using a low toast level first.

STEP 4: Lower the Loading Lever

Lower your Bread Toaster's Loading Lever until it locks into place.

STEP 5: Select a Function

Simply press any of the corresponding bread functions that you want to use (Reheat / Defrost / Cancel). Its corresponding LED will signal its activation.

NOTE: You may also use the Defrost function with the Bread Shade Knob. To do this, simply select the preferred Bread Shade, then press the Defrost button.