

**Aztech**

# ABT3640

Bread Toaster

## USER MANUAL



PLEASE KEEP THIS USER MANUAL FOR FUTURE USE.



# USER MANUAL CONTENTS

USERMANUALCONTENTS.....	3
SAFETY INSTRUCTIONS.....	3
PACKAGECONTENTS.....	5
APPLIANCE OVERVIEW.....	5
USING THE BREAD TOASTER.....	6
CLEANING AND MAINTENANCE.....	7
TROUBLESHOOTING.....	7

## SAFETY INSTRUCTIONS

NOTE: It is STRONGLY ADVISED to ensure that you have read all provided safety guides and operating instructions in this user manual first before proceeding.

- Should damages be found on the appliance, its power cord and/or its other components – do not use the appliance and immediately bring it to the Aztech Service Center for repair or replacement.
- Do not, in any kind of manner, disassemble, dismantle, and/or perform appliance repair on your own and/or replace its components using non-Aztech approved components and/or attachments.
- Do not use the appliance and/or its components for anything other than its intended purpose. The appliance is intended for household use only, commercial usage would void the warranty of the appliance.
- For first time use, use the Bread Toaster without any bread. This will pre-heat the Bread Toaster and will immediately burn off any dust accumulated during storage.
- Before use, please check if the power voltage of your Bread Toaster correctly corresponds to your home's power supply.
- The Bread Toaster is designed with a short power cord to reduce and/or avoid hazards resulting from entanglement and/or tripping commonly encountered in long cords. If you will be using an extension cord, please ensure that the extension cord also corresponds to your Bread Toaster's power supply and that the extension is kept in an organized manner to avoid accidents.
- Do not use the Bread Toaster without the Crumb Tray in place.


- Do not use wet hands in operating the Bread Toaster and/or in inserting or removing its power adapter to prevent electrical shocks. It is recommended to thoroughly dry your hands first before every use.
- Ensure to ALWAYS position your Bread Toaster on a smooth, dry, and stable ground. Placing the appliance on unstable surfaces such as cushioned carpets and/or uneven surfaces may cause the appliance to lose its balance during operation.
- Do not position the appliance in a humid environment and/or in places exposed to multiple sources of heat such as stoves, refrigerators, or ovens. It is also important to keep it away from flammable/combustible materials such as electric burners, curtains and/or cloths especially during use.
- Keep the appliance out of reach of children. If children are within the area during use, ensure to operate the appliance with extra care for safety purposes. Keep its power cord out safely kept away and out of reach during use to avoid unwanted accidents.
- Do not leave the Bread Toaster unattended during use. Always unplug the unit before cleaning and/or after usage.
- Always unplug the power adapter if you are done using your Bread Toaster and allow it to cool down before doing any cleaning, relocation, and/or appliance maintenance.
- When unplugging its power adapter, do not pull or tug its cord. Hold the power adapter firmly on its base when unplugging it from the power outlet. Also, ensure that its power cord is kept away from any source of heat and/or sharp edges that may cause external damage to the cord.
- Do not use its power cord to carry the appliance.
- Do not immerse or expose the Bread Toaster and/or its power cord to water or any kind of liquid substance.
- Your Aztech Bread Toaster is not intended for people with reduced physical, sensory or mental capabilities, and/or lack of experience or knowledge. Constant supervision (from a person responsible for their safety) should be provided if such individuals would be using, cleaning, or operating, the appliance.

# PACKAGE CONTENTS

- ABT3640 Bread Toaster
- Easy Start Guide
- User Manual
- Warranty Policy

# APPLIANCE OVERVIEW

## BREAD TOASTER COMPONENTS

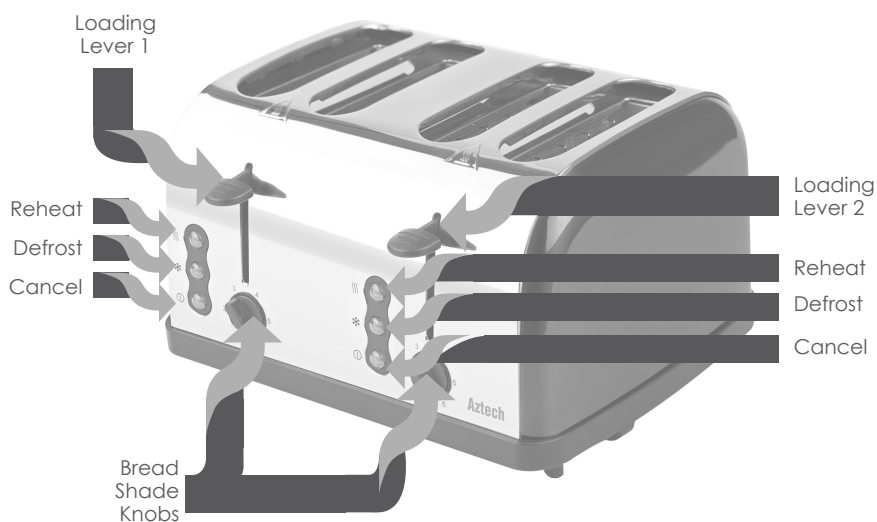

- **BREAD SHADE KNOBS.** Allows you to adjust / select the toasted bread's shade or browning level, with 1 as the lightest and 6 as the darkest setting.
- **LOADING LEVER.** Use this lever to lower the bread slices into the Bread Toaster's slots.
- **CANCEL BUTTON.** After lowering the Loading Lever, the Cancel button's corresponding LED signals its activation. Use this function to cancel a selected operation.
- **DEFROST BUTTON.** Use the Defrost Function to defrost and toast frozen bread.
- **REHEAT BUTTON.** Use the Reheat function to warm up leftover toasts.
- **CRUMB TRAY.** Collects all falling bread crumbs during / after the toasting process. Do not use the Bread Toaster without the Crumb Tray inserted.

# USING THE BREAD TOASTER

## TIPS IN USING YOUR BREAD TOASTER

- Check if the power voltage of your Bread Toaster correctly corresponds to your home's power supply.
- For first time use, use the Bread Toaster without any bread. This will pre-heat the Bread Toaster and will immediately burn off any dust accumulated during storage.
- The Bread Toaster is designed with a short power cord to reduce and/or avoid hazards resulting from entanglement and/or tripping commonly encountered in long cords.
- If you will be using an extension cord, please ensure that the extension cord also corresponds to your Bread Toaster's power supply and that the extension is kept in an organized manner to avoid accidents.
- Ensure that the Crumb Tray is in place. Never operate the Bread Toaster without the Crumb Tray.

## STEP 1: Plug it in

Plug in your Bread Toaster to a power outlet.

## STEP 2: Insert Bread Slices

Simply insert a slice of bread in each bread slot.

## STEP 3: Select a Toasting Level

Simply turn the Bread Shade Knob clockwise to your desired toast level (with 1 being the lightest and 6 as the darkest toast). If you are unsure of what bread shade to use, we recommend you to toast using a low toast level first.

## STEP 4: Lower the Loading Lever

Lower your Bread Toaster's Loading Lever until it locks into place.

## STEP 5: Select a Function

Simply press any of the corresponding bread functions that you want to use (Reheat / Defrost / Cancel). Its corresponding LED will signal its activation.

NOTE: You may also use the Defrost function with the Bread Shade Knob. To do this, simply select the preferred Bread Shade, then press the Defrost button.

# CLEANING AND MAINTENANCE

## TIPS IN CLEANING YOUR BREAD TOASTER

- Always unplug the power adapter of your Bread Toaster and allow it to cool down before doing any cleaning and/or appliance maintenance.
- Do not use any abrasive and/or aggressive cleaners in cleaning your appliance. Simply use a slightly damp cloth to clean your Bread Toaster's external surface.
- Always ensure to regularly clean the Crumb Tray after every use. Simply pull out the Crumb Tray, remove any bread crumbs present, and put the tray back in.

# TROUBLESHOOTING

Your Bread Toaster does not contain any user serviceable parts and/or components. If problems are encountered during appliance usage, you may try doing or checking the following:

- Check if all provided instructions were followed correctly.
- Check if the power outlet corresponds to your Bread Toaster and/or if the power outlet is switched ON (if applicable).
- Check if the power adapter is properly plugged into the power outlet.

If the appliance still encounters problems, please do not use the appliance and immediately bring it to the Aztech Service Center for repair or replacement.

# Aztech